


INSTALLATION INSTRUCTIONS

PREPARATION

KIT CONTENTS

- (2) Fix-A-Flanges
- (2) Washers
- (4) Wood/ Cement screws
- (2) Plastic locking washers
- (2) Toilet bolts w/ nuts

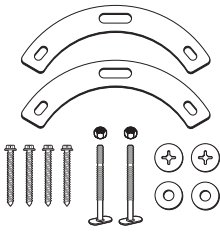

STEP 1


Shut off water to toilet. Flush toilet and remove all water from toilet bowl and tank.

STEP 2

Disconnect water supply. Unbolt toilet from floor and set aside.


STEP 3

Insert toilet bolts through the center hole in Fix-A-Flange(s).

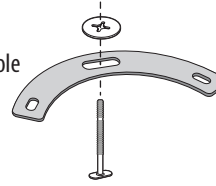

STEP 4

Secure toilet bolts to the Fix-A-Flange(s), using plastic locking washers.

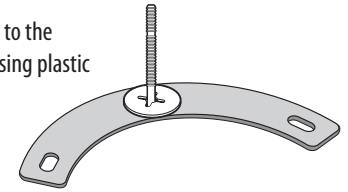


FOR UNDER CLOSET FLANGE INSTALLATION (RECOMMENDED IF POSSIBLE)

STEP 5

Remove closet flange screws holding flange to floor.


STEP 6

Slide Fix-A-Flange(s) under broken closet flange.

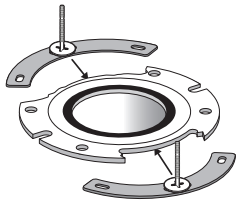


STEP 7

Ensure toilet bolts are perpendicular to wall, centered on the closet flange.

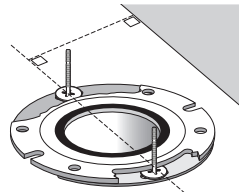

STEP 8

Drill 3/16" holes through the closet flange and into the floor if necessary.

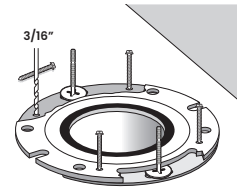

STEP 9

Screw Fix-A-Flange(s) securely to the floor.

STEP 10

Install new toilet seal, reinstall toilet, and secure toilet using the included hardware. Turn water on and flush to inspect for leaks.


FOR ABOVE CLOSET FLANGE INSTALLATION

STEP 5

Place Fix-A-Flange(s) on top of broken closet flange.


STEP 6

Ensure toilet bolts are perpendicular to wall and centered on the closet flange.

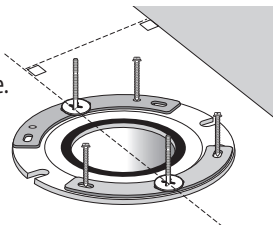

STEP 7

Drill 3/16" holes through the closet flange and into the floor if necessary.

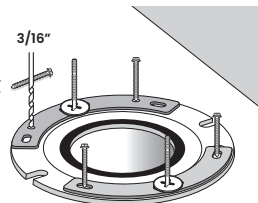

STEP 8

Screw Fix-A-Flange(s) securely to the floor.

STEP 9

Install new toilet seal, reinstall toilet, and secure toilet using the included hardware. Turn water on and flush to inspect for leaks.



FIX-A-FLANGE
COMPLETE

SCAN HERE
For more information,
additional videos, and FAQs

FOR ABOVE CLOSET FLANGE INSTALLATION


ATTENTION

Clearance issues may arise with installations where the Fix-A-Flange is positioned on top of the closet flange.

If measurement 1 is greater than measurement 2, it will be necessary to place shims (sold separately) between the base of the toilet and the floor.

MEASUREMENT 1

Place a straight edge across the highest point of the installed Fix-A-Flange kit. Measure from the floor the bottom of the straight edge.

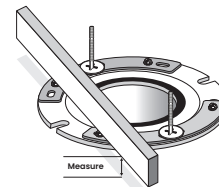

MEASUREMENT 2

Turn the toilet upside down or on its side. Place a straight edge across the bottom of the toilet. Measure from the recess in the toilet to the bottom of the straight edge.

